











	Clip the pager to the rack with the belt clip. The metal terminals on the pager must press against the terminals on the rack
IC 99999	When charging IC 99999 will be displayed in the pager window.
LOW BATT CHARGE – 8 HOURS	Charge for at least 8 hours if "LOW BATT" message has been displayed.
	Pagers do not operate whilst being charged in the rack.
	A standard AA battery charger can also be used to charge batteries.  Danger – do not place non-rechargeable batteries in a battery charger.
 Please dispose of batteries carefully	You can also use non-rechargeable batteries. A quality non-rechargeable battery should last a few weeks.
	To insert (or change) the battery <ul style="list-style-type: none"> • Press down on the battery door, slide it towards the centre and hinge it outwards to reveal the battery compartment. • Remove the old battery or insert a new AA battery with the positive (+) terminal facing up. • Close the cover. Press down and slide cover towards the side of the pager case until it clicks into position.
	<ul style="list-style-type: none"> • The pager will bleep and display 2 crosses to show it is active. The pager is now active and ready to wear.

Fire Alarm Pager











Employee User Guide



	We use a fire alarm pager system in this building.
	The building's fire alarm and the pager system are connected.
	Black pagers are for employees. Red pagers are for visitors.
	The pager should be kept close to the body. You can clip the pager to your belt or waistband or place it in a pocket.
	In standby mode the pager display will look like this.

	<p>When the fire alarm sounds the pager will flash, bleep, vibrate and display a message.</p>
<div>Fire County Hall</div> <div>Fire Chatsworth</div> <div>Fire Stancliffe</div> <div>Fire John Hadfield House</div>	<p>The message will display the location to be evacuated.</p>
	<p>Normal evacuation procedures apply.</p>
	<p>The pager will stop flashing, bleeping and vibrating when the fire alarm stops.</p>
	<p>Do not re-enter the building until the 'All Clear' is given.</p>

Maintenance

<div>1 M</div>	<p>The pager can store up to 3 fire alert messages. The number of stored messages will be shown on the display window. Deleting messages after each 'All Clear' is recommended.</p>
	<p>There are three buttons on the side of the pager. Only the  button is active.</p>
<div>3 of 3</div> <div>2 of 3</div> <div>1 of 3</div>	<p>To view the messages press and release the  button.</p> <p>The pager will display all the messages, one after the other, followed by a delete option.</p>
<div>Delete ?</div>	<p>To delete the messages press and hold the  button, whilst the delete message is displayed.</p>
 <div>LOW BATT</div> 	<p>When "Low Batt" message is displayed the battery needs charging/charging now. The pager will also send a short pulse from time to time to remind you the battery is low.</p>
	<p>At reception, the charging rack and pagers should be in full view of visitors.</p>
 <div>Disposable</div> <div>Rechargeable</div>   <div>✗</div> <div>✓</div>	<p>Pagers with rechargeable batteries can be charged in the rack each night. Danger – Do not place non-rechargeable batteries in the pager charging rack.</p>